OESD™ PREMIER COLLECTION

FALL MUG WRAPS

4
Designs

THREAD LIST

OeSD™ PREMIER COLLECTION

Isacord Thread Colors

0015 White
0131 Smoke
0232 Seaweed
0454 Olive Drab
0660 Vanilla
0824 Liberty Gold
0842 Toffee
0851 Old Gold
0861 Tantone
1565 Espresso
5934 Moss Green
5944 Backyard Green

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

COLLECTION SUPPLIES

OESD™ PREMIER COLLECTION

Stabilizers

- OESD Medium Weight Tear Away
- OESD Applique Fuse and Fix

Fabrics/Textiles

- Felt - assorted fall colors

Notions & Tools

- OESD Grippy GRID
- OESD Expert Embroidery Tape TearAway
- OESD Perfect Embroidery Press Cloth
- 1/8" Elastic
- Decorative button (any size)
- Embroidery Needle Sharp 75/11

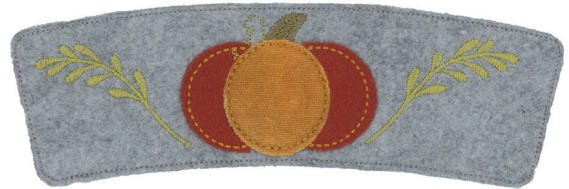## Isacord Thread Colors

- Per thread chart

Embroidery Hoop to accommodate: 2.91" x 8.74"
Finished project size: Size 3.00" x 8.75"

12958-01
8.74 X 2.91 in.

12958-02
8.74 X 2.91 in.

12958-03
8.74 X 2.91 in.

12958-04
8.74 X 2.91 in.

EMBROIDERY

Notes

The mug wrap instructions included in the design pack are general instructions for the designs. For demonstration purposes, a sample design that best demonstrates the technique is shown. Fabric and thread requirements will vary by design, but the general technique is the same. The sample design is 12958-01.

Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.

STEP 1

- Print the mirrored version of the templates (at 100% or 1:1 ratio) onto the paper side of Applique Fuse and Fix.
- Cut approximately ¼" – ½" outside the printed applique templates.

STEP 2

- Fuse the trimmed templates to the wrong side of the appropriate applique fabric with the paper side of the printed template up.
- Hold the iron on the template for 10-15 seconds for a secure fuse.

EMBROIDERY

STEP 3

- Trim the prepared appliques on the outer edge of the black outline.
- Set aside.

STEP 4

- Hoop one layer of Medium Weight TearAway.

STEP 5

- Load the selected design into the machine.
- Example design is 12958-01.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Felt Placement Stitch.

EMBROIDERY

STEP 6

- Remove the hoop from the machine but NOT the project from the hoop.
- Place hoop on a flat surface.
- On the back of the applique fabric, score and remove the paper backing to reveal the adhesive surface.
- Place the applique fabric within the placement stitching.
- Finger press to secure.
  Note: Applique Fuse and Fix is repositionable.

STEP 7

- Return the hoop to the machine.
- Stitch Machine Step 2, Felt Tackdown.

STEP 8

- Stitch Machine Step 3, Felt Placement Stitch.

EMBROIDERY

STEP 9

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the applique fabric, score and remove the paper backing to reveal the adhesive surface.
- Place the applique fabric within the placement stitching.
- Finger press to secure.

STEP 10

- Return the hoop to the machine.
- Stitch Machine Step 4, Felt Tackdown.

STEP 11

- Stitch Machine Step 5, Felt Placement Stitch.

STEP 12

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the applique fabric, score and remove the paper backing to reveal the adhesive surface.
- Place the applique fabric within the placement stitching.
- Finger press to secure.

STEP 13

- Return the hoop to the machine.
- Stitch Machine Step 6, Felt Tackdown.

STEP 14

- Stitch Machine Steps 7 and 8.

EMBROIDERY

STEP 15

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over.
- Cut a piece of elastic 4″ long.
- Fold the elastic in half and position on the placement line as shown, with the fold of the elastic outside of the design.
- Tape the elastic outside of the design.

BACK OF HOOP

STEP 16

- On the back of the applique fabric, score and remove the paper backing to reveal the adhesive surface.
- Place the applique fabric within the placement stitching.
- Finger press gently. Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.

BACK OF HOOP

STEP 17

- Return the hoop to the machine.
- Stitch Machine Step 9, Seam Stitch and Button Mark.

OeSD™ **PREMIER** COLLECTION

STEP 18

- Remove the hoop from the machine and the project from the hoop.
- Remove the excess stabilizer.

STEP 19

- Attach a button over the button placement stitch.

STEP 20

- The mug wrap is complete!

PRINTING INSTRUCTIONS

ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.
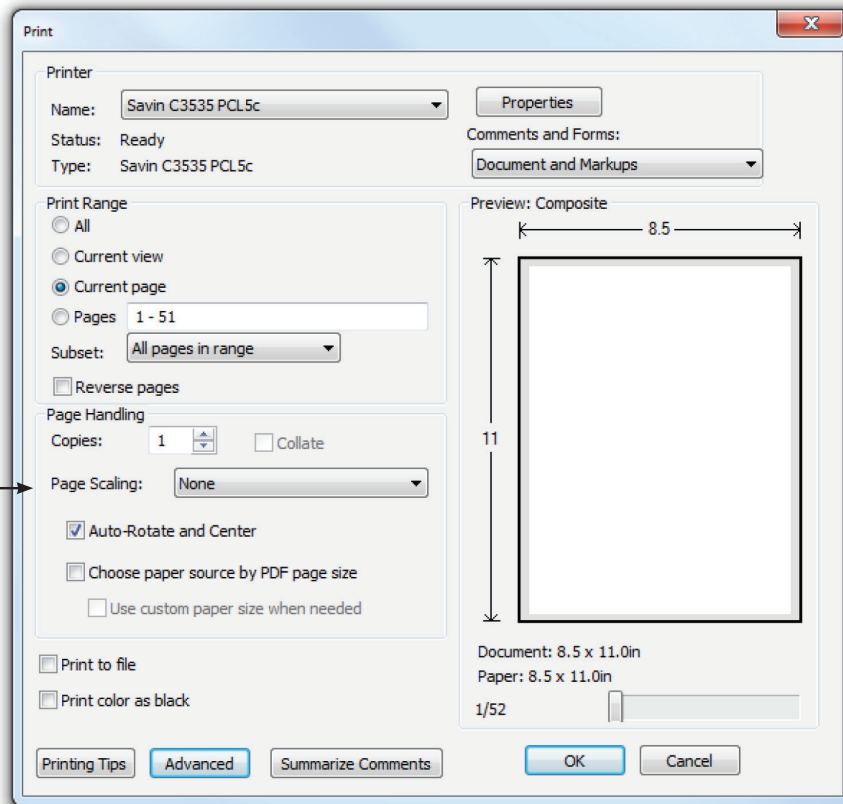
TO SAVE PAPER

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

APPLIQUE PATTERNS

OeSD™ PREMIER COLLECTION

12958-01
Front

12958-01
Back

APPLIQUE PATTERNS

OeSD™ PREMIER COLLECTION

12958-01

12958-01

12958-01

12958-01

12958-01

12958-01

APPLIQUE PATTERNS

OeSD™ **PREMIER** COLLECTION
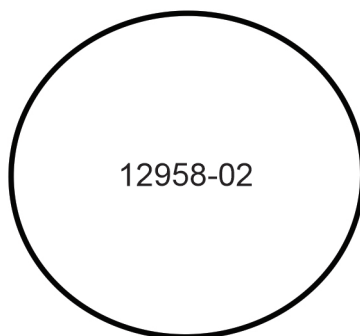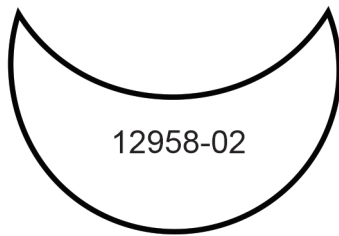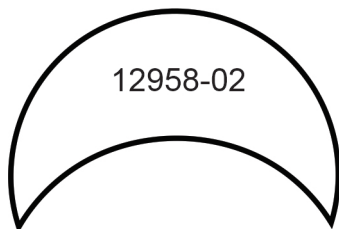
Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

12958-02
Front

12958-02
Back
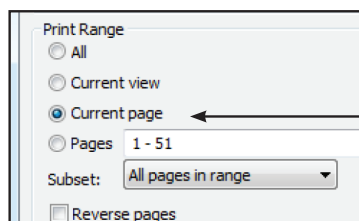
APPLIQUE PATTERNS

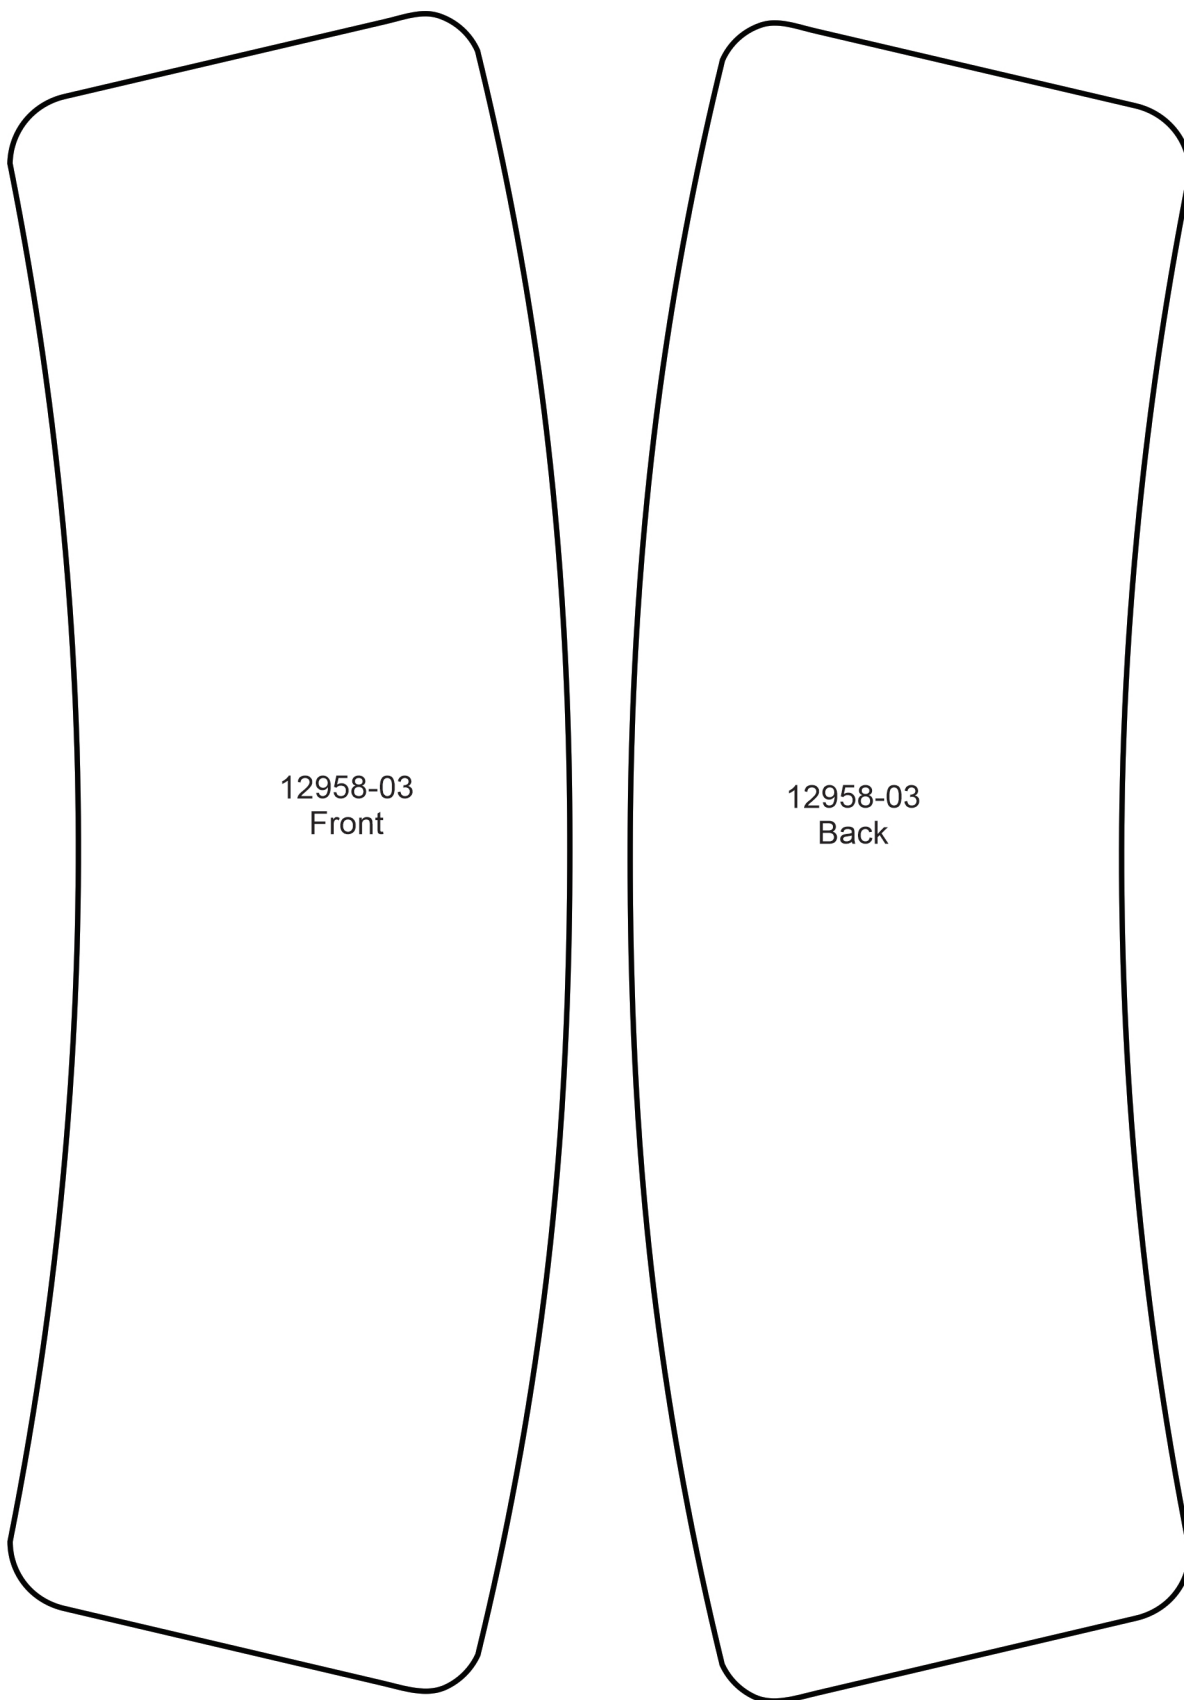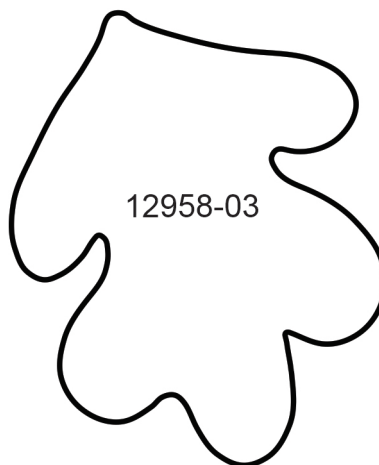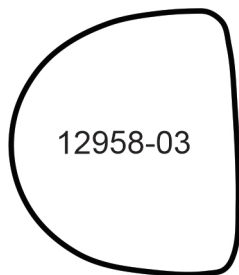Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

12958-02

12958-02

12958-02

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

12958-03
Front

12958-03
Back

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

12958-03

12958-03

12958-03

12958-03

OESD™ **PREMIER** COLLECTION

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.
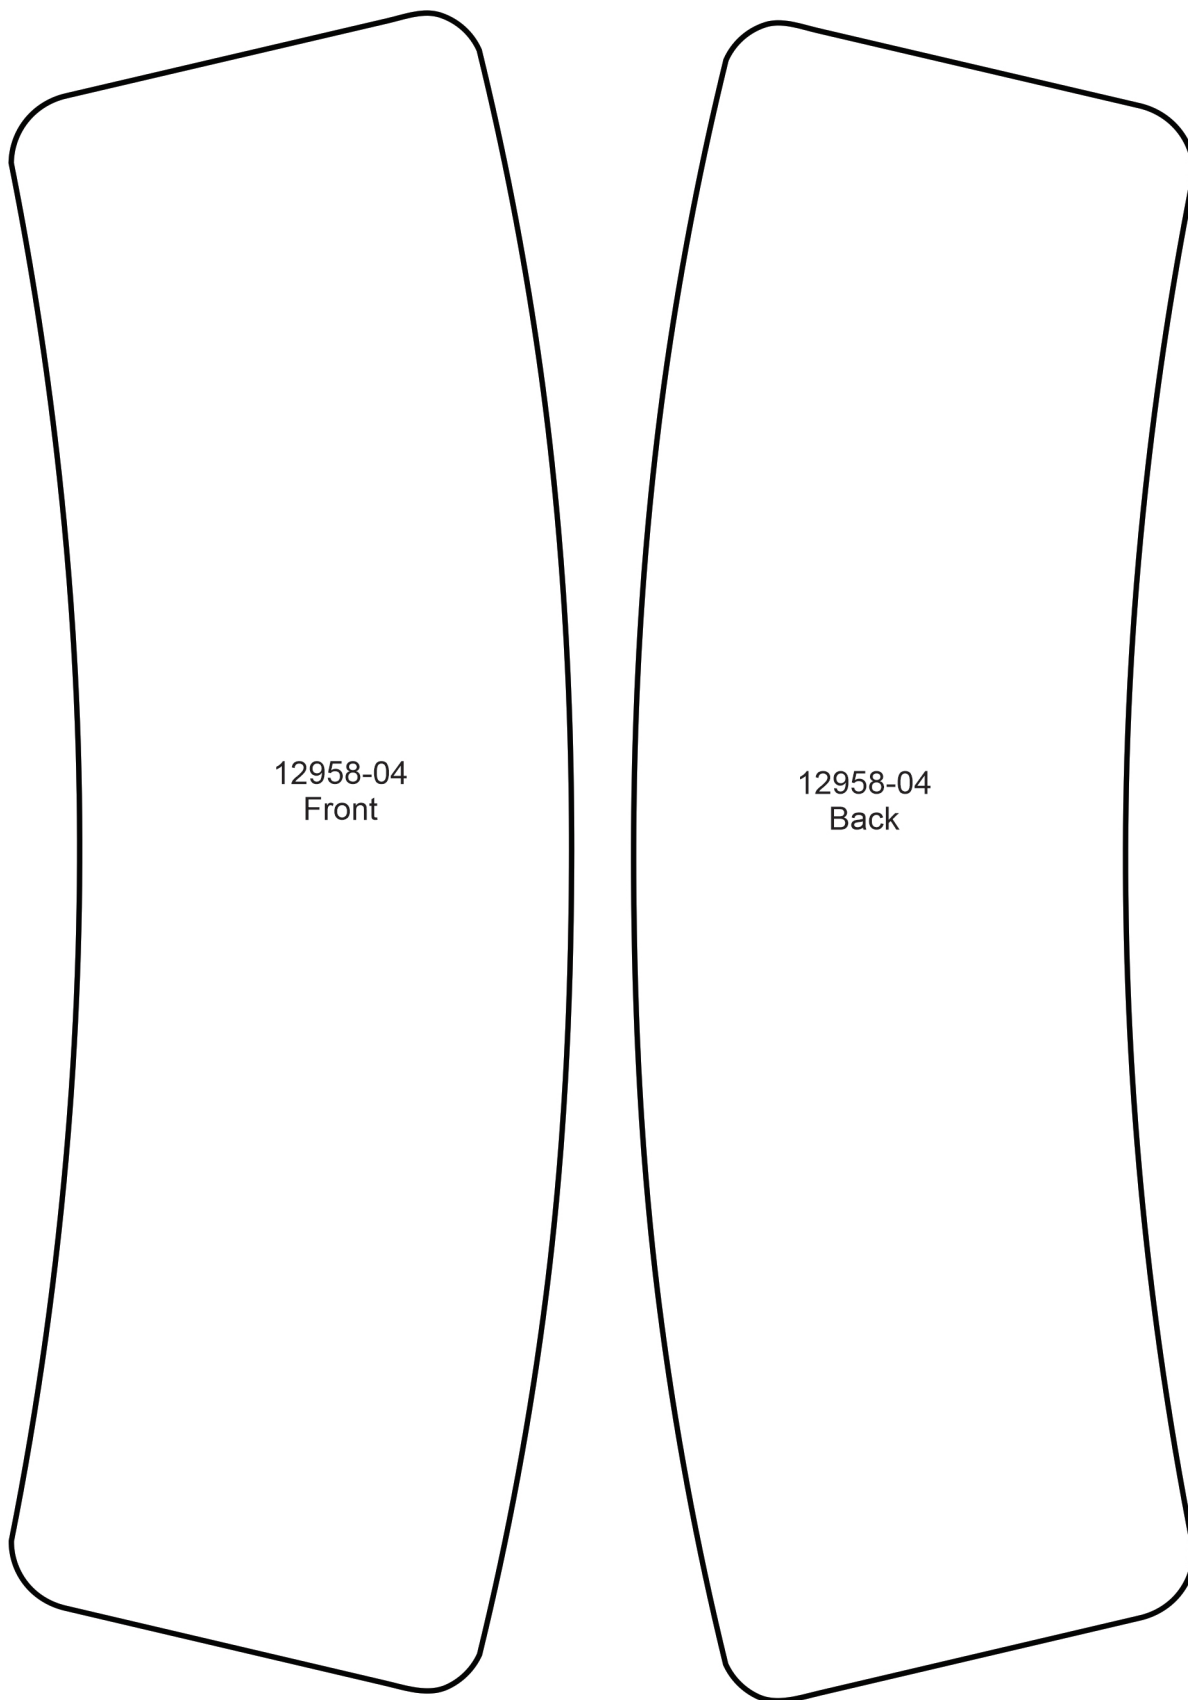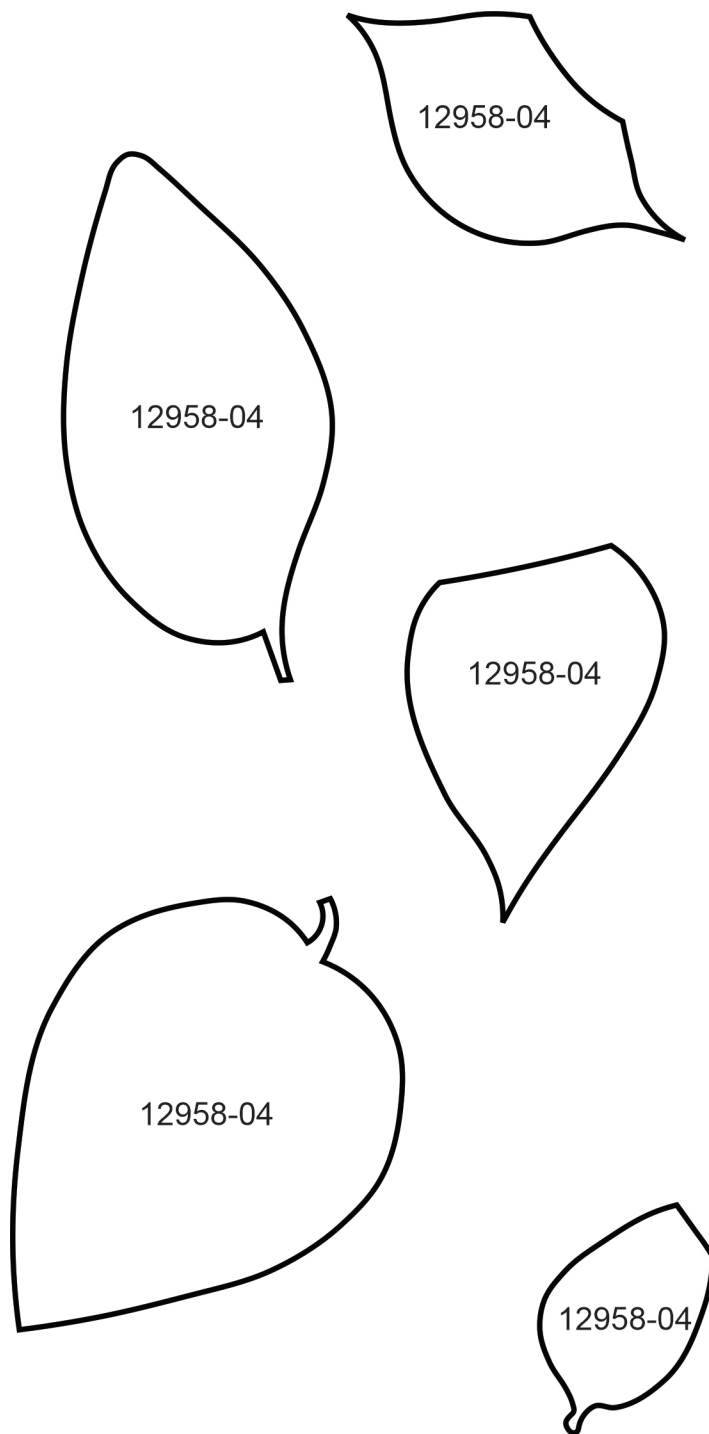
12958-04
Front

12958-04
Back

OESD™ PREMIER COLLECTION

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

12958-04

12958-04

12958-04

12958-04

12958-04

MIRRORED PATTERNS

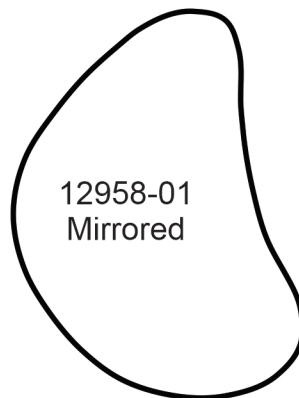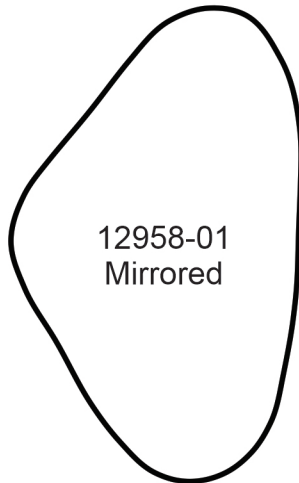**OeSD™ PREMIER** COLLECTION

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

12958-01
Back
Mirrored

12958-01
Front
Mirrored

MIRRORED PATTERNS

OESD™ PREMIER COLLECTION

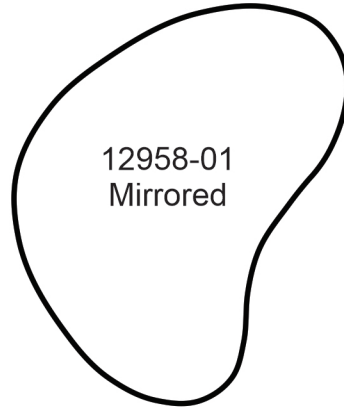Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

12958-01
Mirrored

12958-01
Mirrored

12958-01
Mirrored

12958-01
Mirrored

12958-01
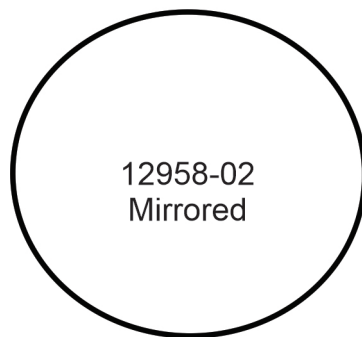Mirrored

12958-01
Mirrored

OeSD™ **PREMIER** COLLECTION

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

12958-02
Back
Mirrored

12958-02
Front
Mirrored

OESD™ **PREMIER** COLLECTION

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

12958-02
Mirrored

12958-02
Mirrored

12958-02
Mirrored

MIRRORED PATTERNS

OeSD™ PREMIER COLLECTION

12958-03
Back
Mirrored

12958-03
Front
Mirrored

MIRRORED PATTERNS

OESD™ **PREMIER** COLLECTION

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

12958-03
Mirrored

12958-03
Mirrored

12958-03
Mirrored

12958-03
Mirrored

MIRRORED PATTERNS

OeSD™ PREMIER COLLECTION

12958-04
Back
Mirrored

12958-04
Front
Mirrored

OESD™ PREMIER COLLECTION

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

12958-04
Mirrored

12958-04
Mirrored

12958-04
Mirrored

12958-04
Mirrored

12958-04
Mirrored