





Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

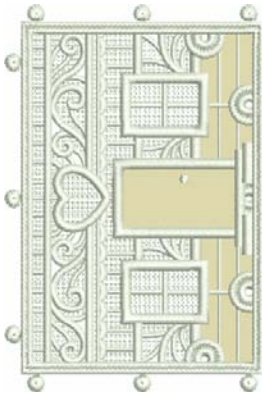


12467-01 Cottage Front Wall Appliqué
3.23 X 4.80 in.
82.04 X 121.92 mm
26,954 St. ⚙️

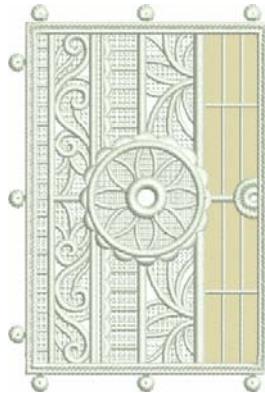


12467-02 Cottage Back Wall Appliqué
3.24 X 4.81 in.
82.30 X 122.17 mm
29,161 St. ⚙️




12467-03 Cottage Side Wall Appliqué
4.06 X 5.09 in.
103.12 X 129.29 mm
28,724 St. ⚙️ L

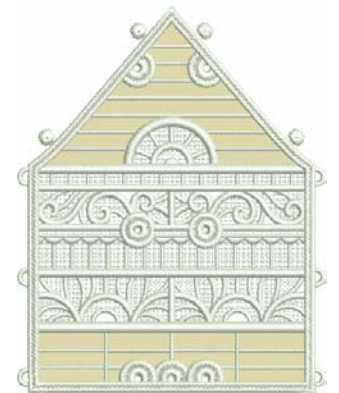


12467-04 Cottage Chimney Wall Appliqué
4.06 X 5.09 in.
103.12 X 129.29 mm
30,351 St. ⚙️ L

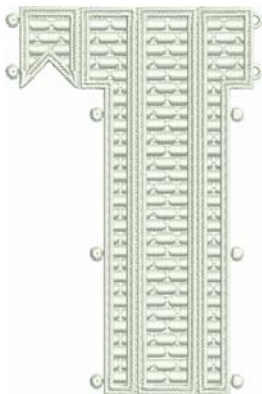


12467-05 Cottage Chimney
3.91 X 5.89 in.
99.31 X 149.61 mm
30,463 St. ⚙️ L

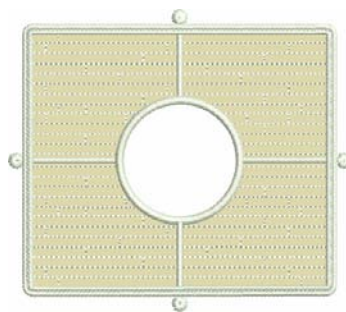


12467-06 Cottage Foundation Appliqué
4.77 X 4.19 in.
121.16 X 106.43 mm
11,632 St. ⚙️

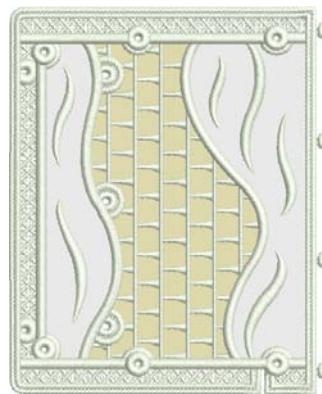


12467-07 Cottage Front Roof Appliqué
4.33 X 5.19 in.
109.98 X 131.83 mm
29,965 St. ⚙️ L

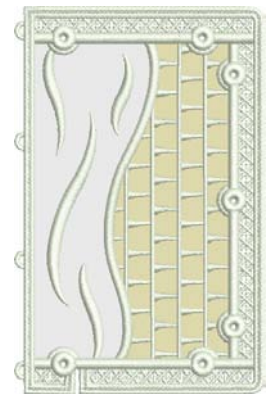

12467-08 Cottage Back Roof Appliqué
3.35 X 5.18 in.
85.09 X 131.57 mm
23,628 St. ⚙️ L

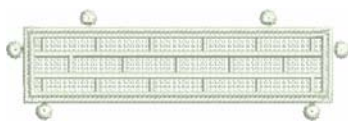

12467-09 Cottage Porch Floor
4.43 X 1.42 in.
112.52 X 36.07 mm
7,879 St. ⚙️ S

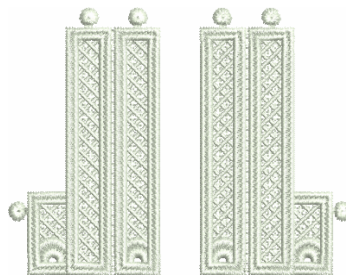

12467-10 Cottage Pillars
3.95 X 3.07 in.
100.33 X 77.98 mm
23,016 St. ⚙️



12467-11 Cottage Fence
3.18 X 1.01 in.
80.77 X 25.65 mm
8,702 St. ⚙️ S



12467-12 Cottage Arch
.77 X 6.04 in.
19.56 X 153.42 mm
15,376 St. ⚙️ L S

⚙️ Design contains a loose fill.

⚙️ Some white areas shown are not stitched.

L Design is larger than 5" (127 mm) in either direction.



S Design is smaller than 1.5" (38.1 mm) in either direction.

Listings below indicate color sample, stitching order and suggested thread color number. "I" refers to Isacord Thread and "T" refers to Timeless. Colors beginning with 20501 refer to YLI Fine Metallics, 7 refer to Yenmet Metallic, 8 refer to YLI Variations Variegated Thread and 9 refer to Isacord Multicolor Variegated.

	I	T		I	T		I	T
12467-01 Cottage Front Wall Appliqué			12467-06 Cottage Foundation Appliqué			12467-09 Cottage Porch Floor		
<input type="checkbox"/> 1. Placement Stitch.....	0015	28154	<input type="checkbox"/> 1. Placement Stitch.....	0015	28154	<input type="checkbox"/> 1. Lace.....	0015	28154
<input type="checkbox"/> 2. Cut Line & Tackdown.....	0015	28154	<input type="checkbox"/> 2. Cut Line & Tackdown.....	0015	28154			
<input type="checkbox"/> 3. Lace.....	0015	28154	<input type="checkbox"/> 3. Lace.....	0015	28154	12467-10 Cottage Pillars		
						<input type="checkbox"/> 1. Lace.....	0015	28154
12467-02 Cottage Back Wall Appliqué			12467-07 Cottage Front Roof Appliqué			12467-11 Cottage Fence		
<input type="checkbox"/> 1. Placement Stitch.....	0015	28154	<input type="checkbox"/> 1. Roof Placement Stitch.....	0015	28154	<input type="checkbox"/> 1. Lace.....	0015	28154
<input type="checkbox"/> 2. Cut Line & Tackdown.....	0015	28154	<input type="checkbox"/> 2. Roof Cut Line & Tackdown.....	0015	28154			
<input type="checkbox"/> 3. Lace.....	0015	28154	<input type="checkbox"/> 3. Snow Placement Stitch.....	0015	28154	12467-12 Cottage Arch		
			<input type="checkbox"/> 4. Snow Cut Line & Tackdown.....	0015	28154	<input type="checkbox"/> 1. Lace.....	0015	28154
12467-03 Cottage Side Wall Appliqué			<input type="checkbox"/> 5. Lace.....	0015	28154			
<input type="checkbox"/> 1. Placement Stitch.....	0015	28154	12467-08 Cottage Back Roof Appliqué					
<input type="checkbox"/> 2. Cut Line & Tackdown.....	0015	28154	<input type="checkbox"/> 1. Snow Placement Stitch.....	0015	28154			
<input type="checkbox"/> 3. Lace.....	0015	28154	<input type="checkbox"/> 2. Snow Cut Line & Tackdown.....	0015	28154			
			<input type="checkbox"/> 3. Roof Placement Stitch.....	0015	28154			
12467-04 Cottage Chimney Wall Appliqué			<input type="checkbox"/> 4. Roof Cut Line & Tackdown.....	0015	28154			
<input type="checkbox"/> 1. Placement Stitch.....	0015	28154	<input type="checkbox"/> 5. Lace.....	0015	28154			
<input type="checkbox"/> 2. Cut Line & Tackdown.....	0015	28154						
<input type="checkbox"/> 3. Lace.....	0015	28154						
12467-05 Cottage Chimney								
<input type="checkbox"/> 1. Lace.....	0015	28154						

Cut in Place Appliqué Instructions

1. Hoop your fabric and backing.
2. Sew the pattern/placement. **PHOTO 1**
3. Place a piece of appliqué fabric over the pattern/placement so that it is completely covered.
4. Sew the trim stitch/tackdown.
5. Carefully cut away the excess appliqué fabric. **PHOTO 2**
6. Sew the remainder of the design and repeat for any remaining pieces. **PHOTO 3**

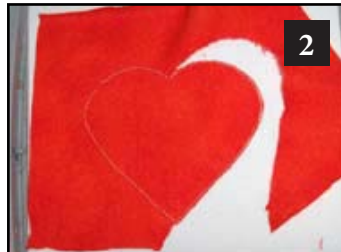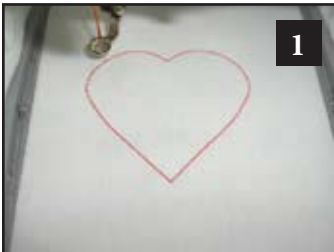

Christmas Village: Cottage with Fence

Instructions

GENERAL FREESTANDING LACE GUIDELINES

SUPPLIES:

Embroidery Thread:

- Use the same embroidery thread in the bobbin as the needle.

Needles:

- Use an Organ 80/12 Titanium needle for extended needle life.

Stabilizer:

- Use water-soluble stabilizer or film water-soluble stabilizer.

GENERAL INSTRUCTIONS

1. Hoop two layers of water-soluble stabilizer.
2. Attach the hoop to the machine and select the design of your choice.
3. Stitch the design.
4. Remove the hoop from the machine and the design from the hoop. Trim excess stabilizer from the design.
5. Rinse away remaining stabilizer and allow it to dry.

HANDY HINTS:


- DO NOT RINSE away all of the stabilizer for a “stiffer” lace. Note that the thread may appear a shade darker if stabilizer is not removed completely.
- If you happen to wash too much out, easily re-stiffen by diluting some stabilizer scraps in water and dipping the item in the solution.

Drying Lace:

- Lay lace piece with right side down to dry. This will minimize the tendency for the lace to curl.

Handy tips:

- A pair of tweezers, hemostats, stiletto or a tiny crochet hook can be extremely helpful when inserting the buttonettes into the eyelets. (Please see **Diagram 1** for explanation of “buttonette” and “eyelet” and “hinge line”.)
- Insert the tip of the tweezers, hemostats or crochet hook into the eyelet, grasp the buttonette and pull through the eyelet.
- A stiletto could be used to “push” the buttonette through the eyelet.
- The lace looks best when left to dry completely. Be sure to flatten the piece out entirely and allow ample time to dry.
- If item becomes too limp to work with, dissolve scrap pieces of water-soluble stabilizer in warm water and apply to the item to re-stiffen.
- Alternatively you can iron the appliqué pieces on the wrong side while applying spray starch. After ironing, spray again with starch and allow to dry completely. This will stiffen the lace pieces nicely and aid in construction.

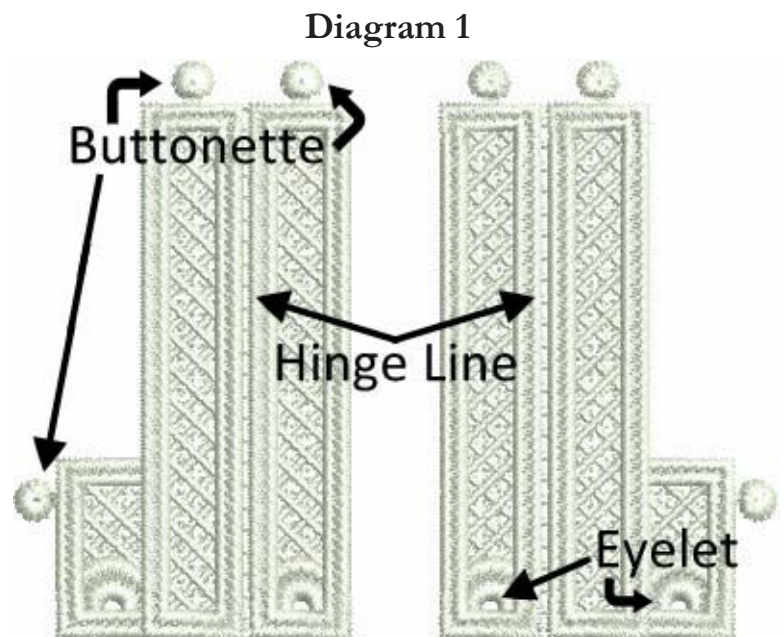

Christmas Village: Cottage with Fence




Instructions

- Attach the assembled porch to the front wall by inserting the buttonettes of the porch floor into the eyelets along the bottom of the front wall. Next connect the single eyelet on the short edge of each pillar into the eyelet on each edge of the front wall.

Photo E

***Note: The pillars were removed for the sake of this picture. Do not remove pillars when attaching assembled porch.*

- Attach the front roof panel. Starting at the top, insert the buttonettes on the left wall to the eyelets of the front roof panel. Work your way across the front wall and up the right wall. Finish by inserting the buttonettes of the porch supports to the eyelets found in the front corners of the front roof panel. **Photo F**
- Attach the chimney. Starting at the bottom right of the chimney, insert the buttonettes of the chimney to the eyelets of the right wall. Alternate left and right buttonettes and work upward toward the roof. Leave the chimney top unbuttoned. **Photo G**
- Attach the back roof panel. Start by inserting the three buttonettes of the top edge of the front roof panel into the three eyelets of the top edge of the back roof panel. After this begin at the top buttonette on the left wall, near the chimney. Work down the left wall, across the back wall and up the right wall by inserting the buttonettes of the walls to the corresponding eyelets on the back roof panel.
- Insert the three buttonettes along the left side of the back wall to the eyelets on the left wall.
- Insert the single buttonette of the foundation into the eyelet of the back wall.
- Complete the chimney by inserting the two buttonettes of the left wall of the chimney into the eyelets on the back wall of the chimney. **Photo H**
- Your Free Standing Lace Cottage is complete!

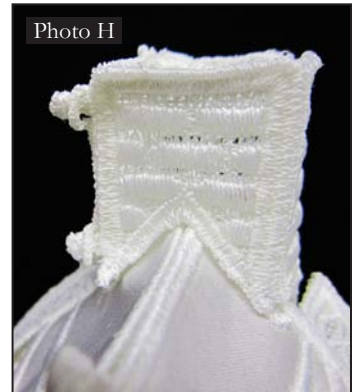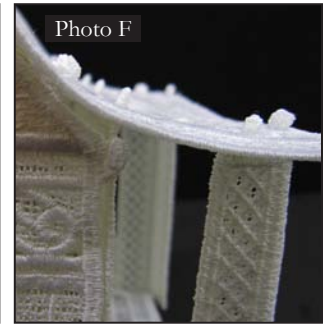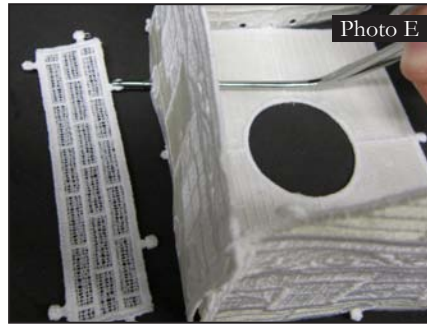

To assemble the Cottage Arch

- The arch is actually formed with the “wrong side” outward. This is done this way so the stone foot path is presented with the “right side” up and so that the trellis archway stands upright correctly.
- Form the arch when the lace is still slightly damp. Pinch the two “hinge lines” together and apply a light downward pressure to the top of the arch formed. Be sure the “wrong side” is facing outward or the arch way will attempt to collapse even if completely dry. Set down and allow the trellis to dry completely. **Photo I**
- Insert buttonettes on the stone foot patch to the eyelets on the arched trellis.
- Your Freestanding Lace Garden Trellis Archway is now complete.



To set up Cottage Fence

- Fence panels should be dried as flat as possible. After dry bend the tabs at a 90 degree angle to create supports. Bend fence panels at the hinge line to create corner pieces.
- If desired, sew the fence panels together for increased stability, or leave them as individual panels for more versatility.