



MATERIALS



#### **Isacord Thread Colors**

0010 Silky White 0020 Black

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

# MATERIALS



#### **Stabilizers**

OESD Fuse and Fleece

#### Fabrics/Textiles

- · Assorted quilter's cotton for piecing
- Quilter's cotton 7" x 7" (2) for envelope enclosure

#### **Notion & Tools**

- OESD Grippy GRID
- OESD Expert Embroidery Tape TearAway
- OESD Expert Point and Press Tool
- OESD Perfect Embroidery Press Cloth
- Embroidery Needle Sharp 75/11

#### Isacord Thread Colors

- Per the thread chart
- Match bobbin thread to top thread

# SUMMARY



12974-01 Requires 1 Design Completed Size: 6.00 X 5.74 in.


# **FRONT**



**BACK** 


12974-02 Requires 1 Design Completed Size: 6.00 X 5.75 in.

#### **FRONT**

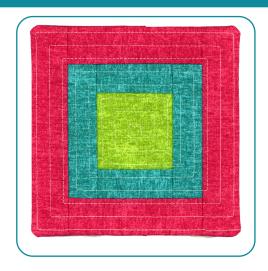



## **BACK**

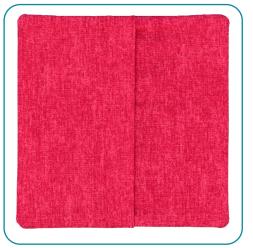

# SUMMARY




12974-03 Requires 1 Design Completed Size: 6.00 X 6.02 in.

#### **FRONT**



# **BACK**

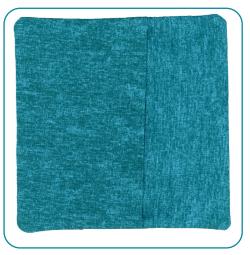

12974-04 Requires 1 Design Completed Size: 6.00 X 5.82 in.

#### **FRONT**



#### **BACK**




# SUMMARY




12974-05 Requires 1 Design Completed Size: 6.00 X 5.72 in.

#### **FRONT**

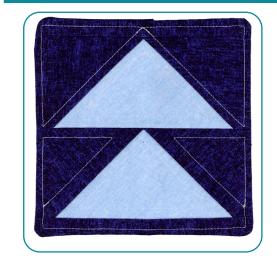



#### **BACK**

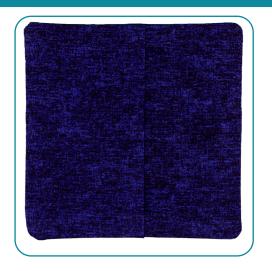



#### General Instructions

The instructions included in the collection are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Fabric and thread requirements will vary by design, but the general technique is the same.

All designs are stitched with matching thread, top and bobbin.

Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.


# Step 1

Press the two envelope enclosure pieces in half wrong sides together.



## Step 2

Apply Fuse and Fleece to one half of the wrong side of the envelope enclosure fabric, lining up the Fuse and Fleece with the fold of the fabric.

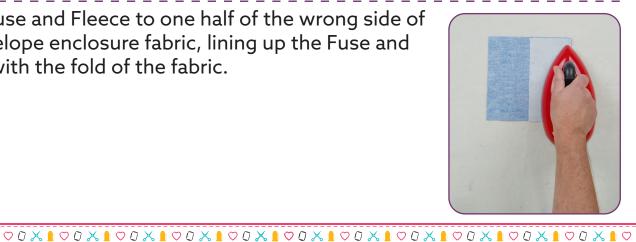



# Step 3

- Re-fold outer fabrics and press.
- Set aside.



## Step 4

 Hoop one layer of Fuse and Fleece, fusible (shiny) side up, for all designs.



## Step 5

- · Load selected design into the machine.
- Example design is 12974-01.
- Thread the machine per the thread chart.
- Match the bobbin thread to the upper thread.
- · Place the hoop on the machine.
- Stitch Machine Step 1, Design and Placement Guide 1.






# Step 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- With a pen, extend the placement lines on each side of the design as shown.




# Step 7

 Following the Paper Piecing Guides beginning on page 16, completely cover the first placement guide with the fabric, right side up.

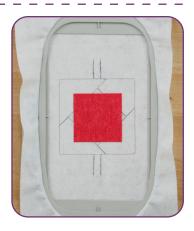

# Step 8


- · Return the hoop to the machine.
- Stitch Machine Step 2, Tackdown 1.

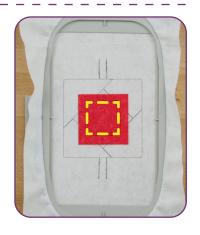




# Step 9

• Stitch Machine Step 3, Placement Guide 2.

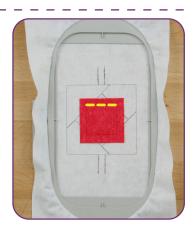

## Step 10

- Remove the hoop from the machine, but NOT the project from the hoop.
- · Place the hoop on a flat surface.
- Trim fabric on placement line, being careful not to cut your stitching.

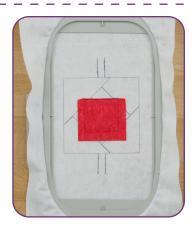

# Step 11


 Line up fabric 2 with the Placement Guide 2, right side down.






# Step 12

- · Return the hoop to the machine.
- Stitch Machine Step 4, Tackdown 2.

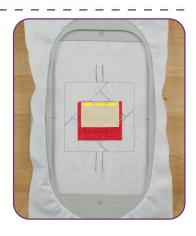

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- · Fold the fabric open, finger press, and tape in place.

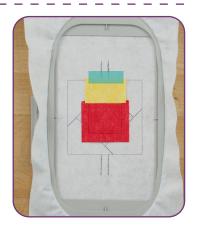



# Step 14

Repeat for remaining 7 fabric pieces.



- Thread the machine with matching thread in the top and bobbin.
- Stitch Machine Step 19, Quilting.
- Trim excess fabric, leaving 1/4" seam allowance outside of quilting stitch, on all four sides.





- Remove the hoop from the machine, but NOT the project from the hoop.
- Position one of the folded fabrics (7" x 3 1/2" folded) over the left side of the design, aligning the folded edge with the right side placement line as shown.
- Position the other folded fabric (7" x 3 1/2" folded) over the right side of the design, aligning the folded edge with the left side placement line as shown.
- Tape in place to secure.
  TIP: By overlapping the two fabrics in the listed order will prevent the embroidery foot from catching on the overlapped edge of the fabric.










# Step 17

Stitch Machine Step 20, Seam.

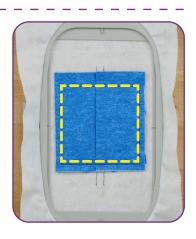

- Remove the hoop from the machine and the project from the hoop.
- Trim the outer edges 1/4" from the seam stitch on all four sides.
- Clip each corner diagonally.





# Step 19

- Turn the project right side out.
- Use the Expert Point and Press Tool to push out the corners and side seams.
- Press right side down on a Perfect Embroidery Press Cloth.





# Step 20

• The project is complete. Enjoy!



# PAPER PIECING GUIDES OSE



