





Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.



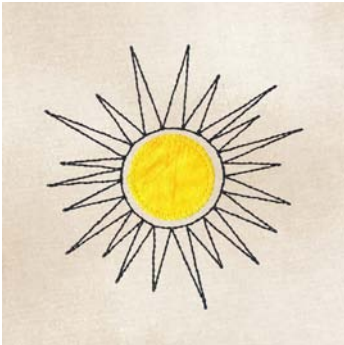


12497-01 Appliqué Sun

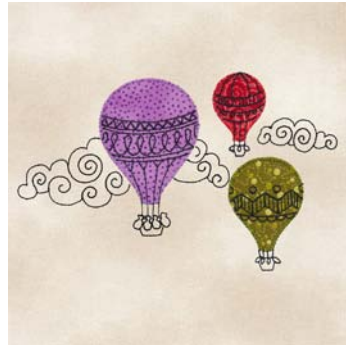2.99 X 3.06 in.
75.95 X 77.72 mm
1,888 St.  




12497-02 Appliqué Balloons

6.55 X 4.05 in.
166.37 X 102.87 mm
5,566 St.   





12497-03 Linework Cloud

3.85 X 1.84 in.
97.79 X 46.74 mm
1,428 St. 





12497-04 Appliqué Airplane

4.60 X 3.01 in.
116.84 X 76.45 mm
2,161 St.  






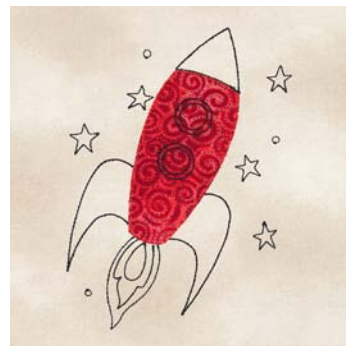
12497-05 Appliqué Kite

5.07 X 4.87 in.
128.78 X 123.70 mm
2,805 St.  






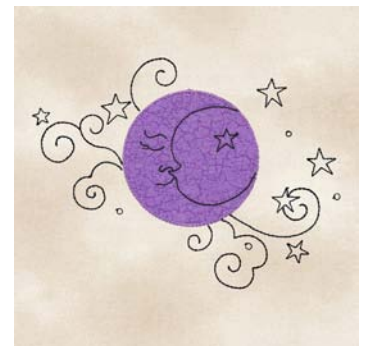
12497-06 Appliqué Planet

4.65 X 5.36 in.
118.11 X 136.14 mm
2,823 St.   






12497-07 Appliqué Rocket

4.25 X 5.77 in.
107.95 X 146.56 mm
2,792 St.   





12497-08 Appliqué Moon

6.23 X 4.65 in.
158.24 X 118.11 mm
3,051 St.   




12497-09 Appliqué Butterflies


3.87 X 5.38 in.
98.30 X 136.65 mm
4,819 St.  





12497-10 Appliqué Butterfly

2.37 X 2.64 in.
60.20 X 67.06 mm
1,629 St. 

 Design contains a loose fill.

 Some white areas shown are not stitched.

 Design is larger than 5" (127 mm) in either direction.

 Design is smaller than 1.5" (38.1 mm) in either direction.



Scenic Sky Appliqué

#12497 / 10 Designs

Listings below indicate color sample, stitching order and suggested thread color number. "I" refers to Isacord thread and "T" refers to Timeless thread. Colors beginning with 20501 refer to YLI Fine Metallics, 7 refer to Yenmet Metallic, 8 refer to YLI Variations Variegated Thread and 9 refer to Isacord Multicolor Variegated.

12497-01 Appliqué Sun

	I	T
1. Sun Placement Stitch	0310	22124
2. Tackdown.....	0310	22124
3. Linework	0020	28151

12497-04 Appliqué Airplane

	I	T
1. Airplane Placement Stitch	1902	12121
2. Tackdown.....	1902	12121
3. Linework	0020	28151

12497-08 Appliqué Moon

	I	T
1. Moon Placement Stitch.....	2830	16127
2. Tackdown.....	2830	16127
3. Linework	0020	28151

12497-02 Appliqué Balloons

1. Purple Balloon Placement Stitch	2830	16127
2. Tackdown.....	2830	16127
3. Red Balloon Placement Stitch	1701	12103
4. Tackdown.....	1701	12103
5. Green Balloon Placement Stitch.....	5934	18193
6. Tackdown.....	5934	18193
7. Linework	0020	28151

12497-05 Appliqué Kite

1. Kite Placement Stitch	2300	10163
2. Tackdown.....	2300	10163
3. Linework	0020	28151

12497-09 Appliqué Butterflies

1. Purple Butterfly Placement Stitch	2830	16127
2. Tackdown.....	2830	16127
3. Orange Butterfly Placement Stitch	1102	24115
4. Tackdown.....	1102	24115
5. Linework	0020	28151

12497-03 Linework Cloud

1. Single Color design	0020	28151
------------------------------	------	-------

12497-06 Appliqué Planet

1. Planet Placement Stitch	3641	14130
2. Tackdown.....	3641	14130
3. Linework	0020	28151

12497-10 Appliqué Butterfly


1. Wings Placement Stitch.....	4610	14193
2. Tackdown.....	4610	14193
3. Linework	0020	28151

12497-07 Appliqué Rocket

1. Rocket Placement Stitch	1701	12103
2. Tackdown.....	1701	12103
3. Linework	0020	28151

Cut-in-Place Appliqué

1. Hoop your fabric and backing.
2. Sew the pattern/placement. **PHOTO 1**
3. Place a piece of appliqué fabric over the pattern/placement so that it is completely covered.
4. Sew the trim stitch/tackdown.
5. Carefully cut away the excess appliqué fabric. **PHOTO 2**
6. Sew the remainder of the design and repeat for any remaining pieces. **PHOTO 3**

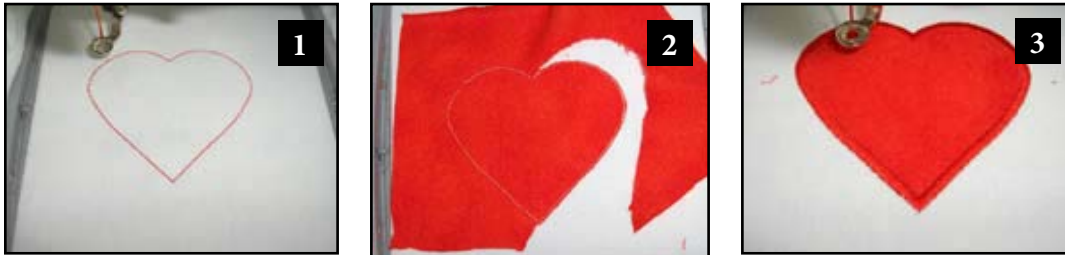


Pre-Cut Appliqué

1. Print out the necessary pages from the PDF of the appliqué pattern(s).
2. Mark the right side of the pattern pieces so you'll know which direction to lay the pattern on the fabric.
3. Lightly spray the wrong side of the pattern pieces with temporary adhesive spray and allow it to set for a few minutes.
4. Place the pattern pieces on the right side of the fabric and carefully cut them out. **PHOTO 1**
5. Sew the placement stitch on your hooped fabric. **PHOTO 2**
6. With the paper still stuck to the right side of the appliqué fabric, spray the wrong side of the fabric with temporary spray adhesive.
7. Place the fabric inside the sewing placement stitch so that it matches the stitching line, and then remove the paper pattern. **PHOTO 3**
8. Sew the tackdown. **PHOTO 4**
9. Sew the remainder of the design and repeat for any remaining pieces. **PHOTO 5**


NOTE: The patterns are sized for the designs as they were made. If you resize the design, you will need to resize the pattern the same amount. You can print out the pattern at the normal size then copy it on a copy machine at the changed size. For example, resize the designs to 80%, resize the printed pattern to 80%.

TIP: When Printing the patterns, make sure that the "Fit to page" option is UNCHECKED in the Print Dialog Box. If this option is checked the printed patterns will not be actual size.

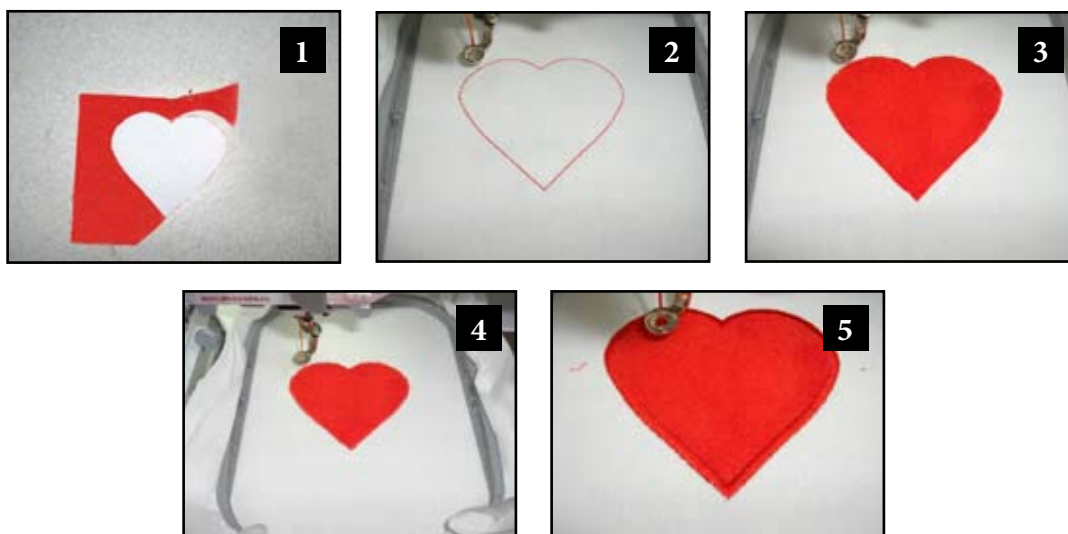


ATTENTION



When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.



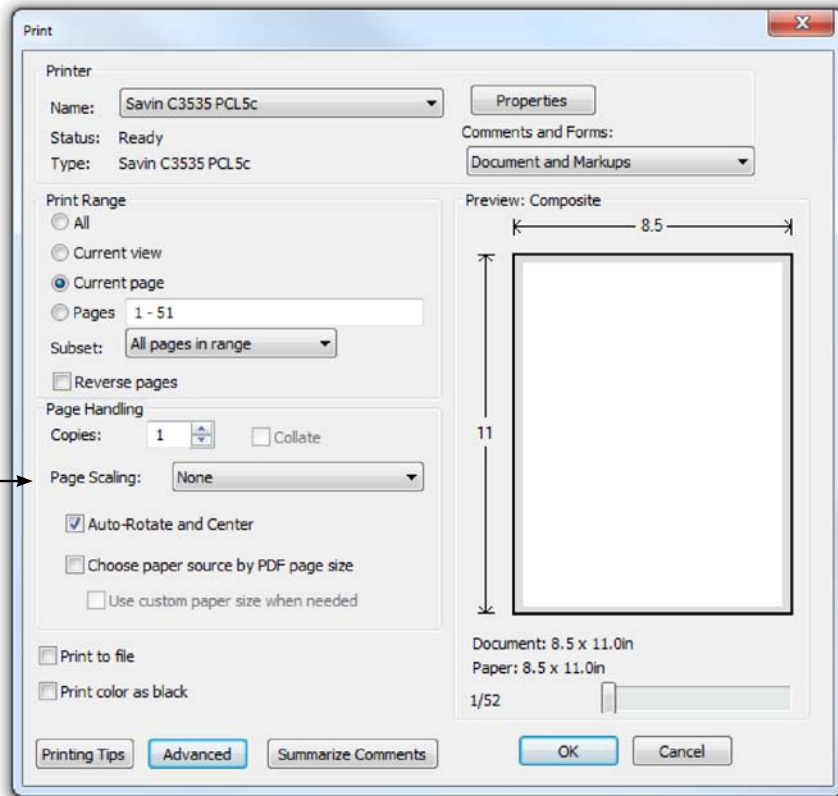



TO SAVE PAPER

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

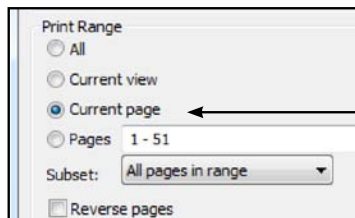


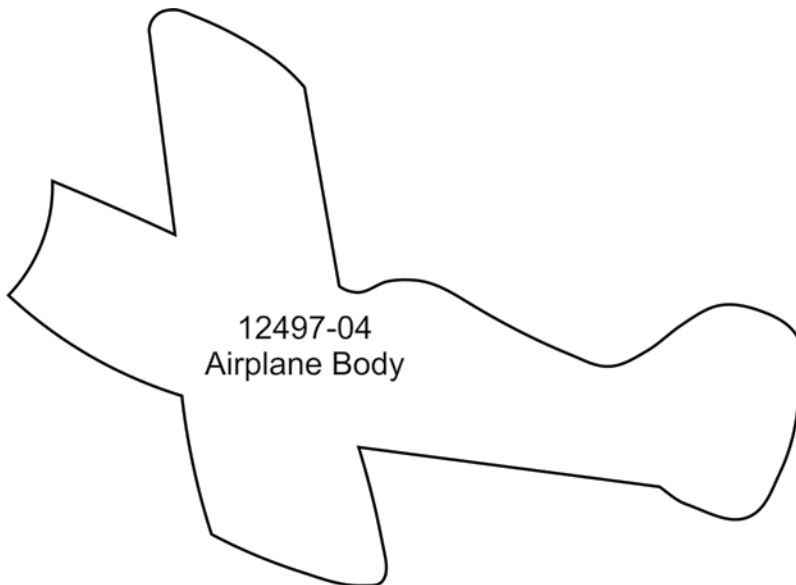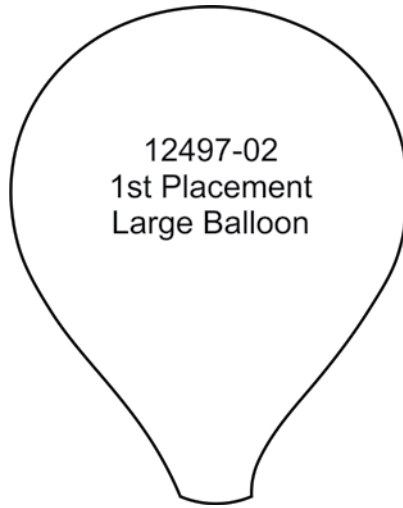

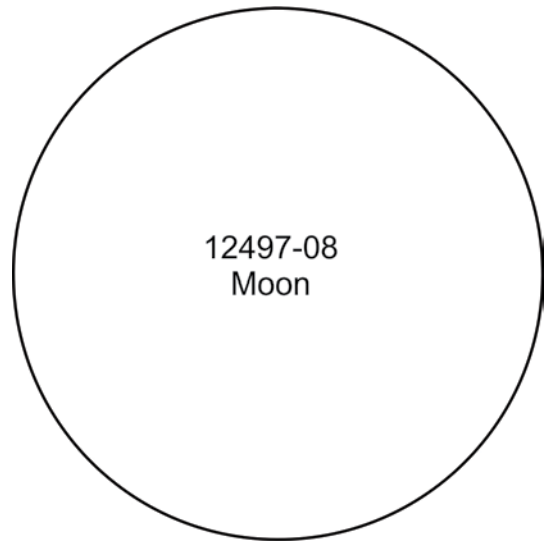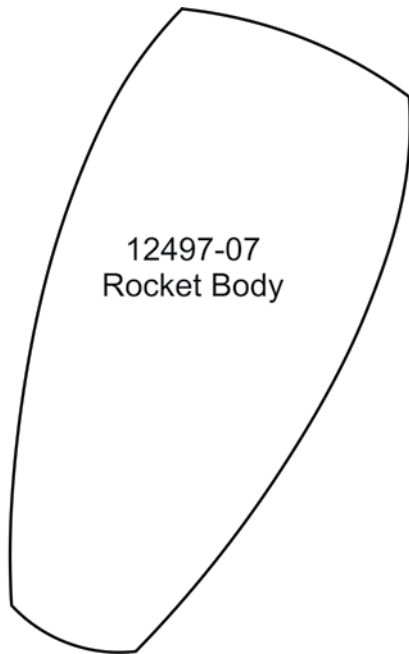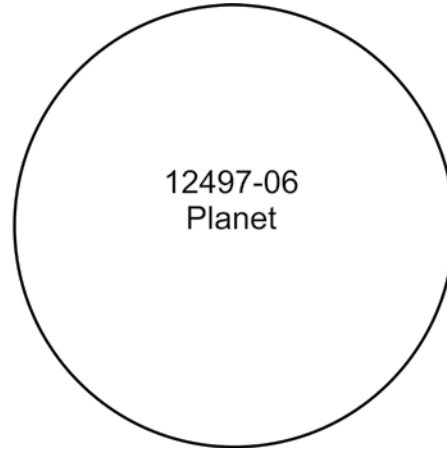


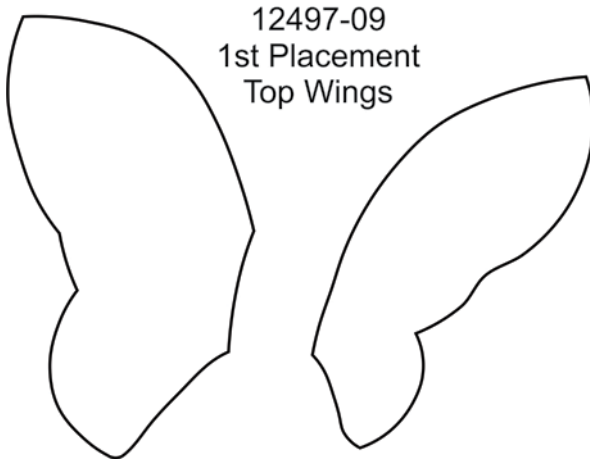

12497-09
1st Placement
Top Wings

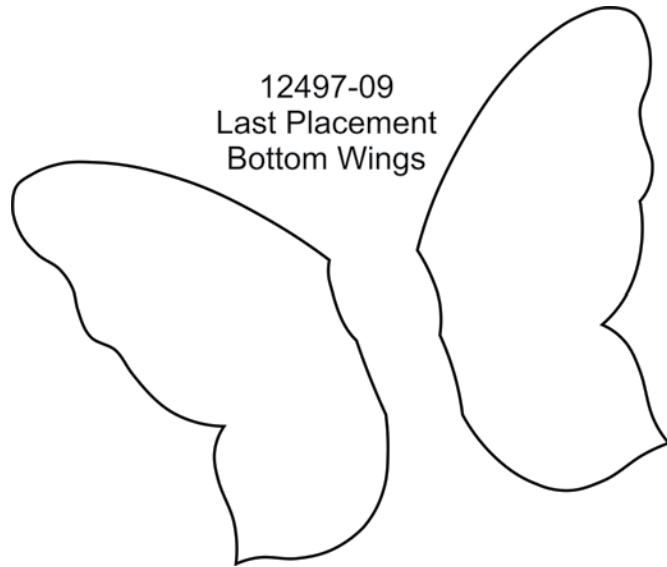

12497-09
Last Placement
Bottom Wings

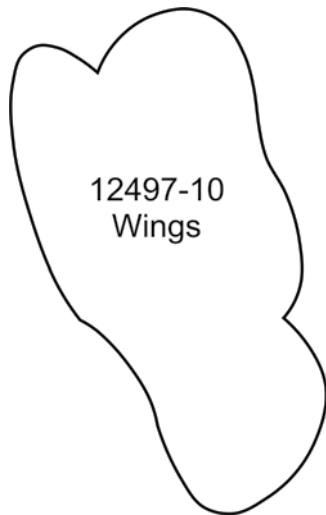

12497-10
Wings